



Installation Instructions

Anchor Span Liner

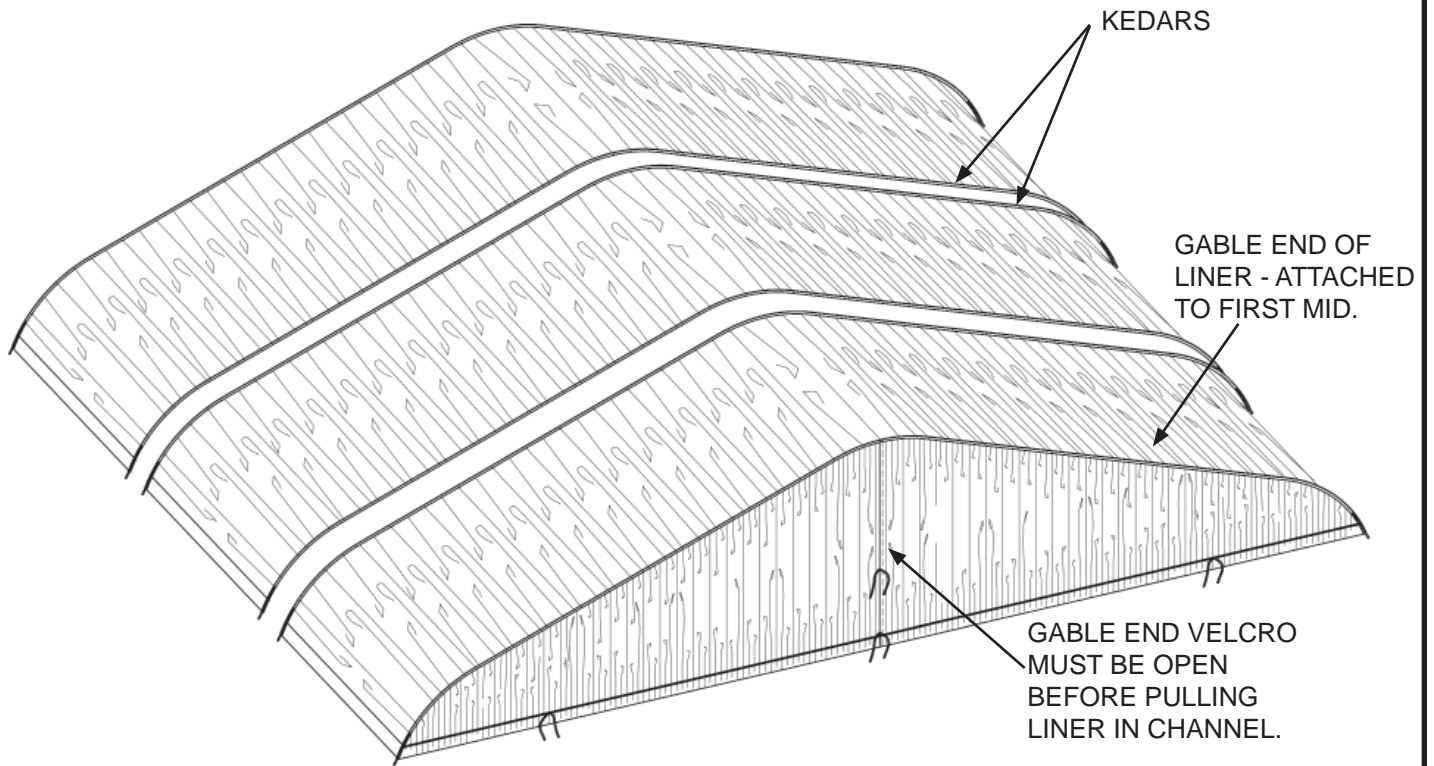

STEP 1

BE CERTAIN GABLE END VELCRO IS OPEN BEFORE BEGINNING INSTALLATION. CONNECT PULL ROPES TO D-RINGS AT LOWER ENDS OF LINER MID. STARTING AT CHANNEL OPENINGS IN BEAMS, SLIDE KEDAR INTO INSIDE CHANNELS OF BEAMS. START BOTH SIDES OF MID AT THE SAME TIME. MIDS WILL BE PULLED IN WITH PULL ROPES. PULLEY MAY BE ATTACHED AT TOP ARCH OF FRAME FOR THIS PURPOSE, OR PUSH POLES CAN BE USED.

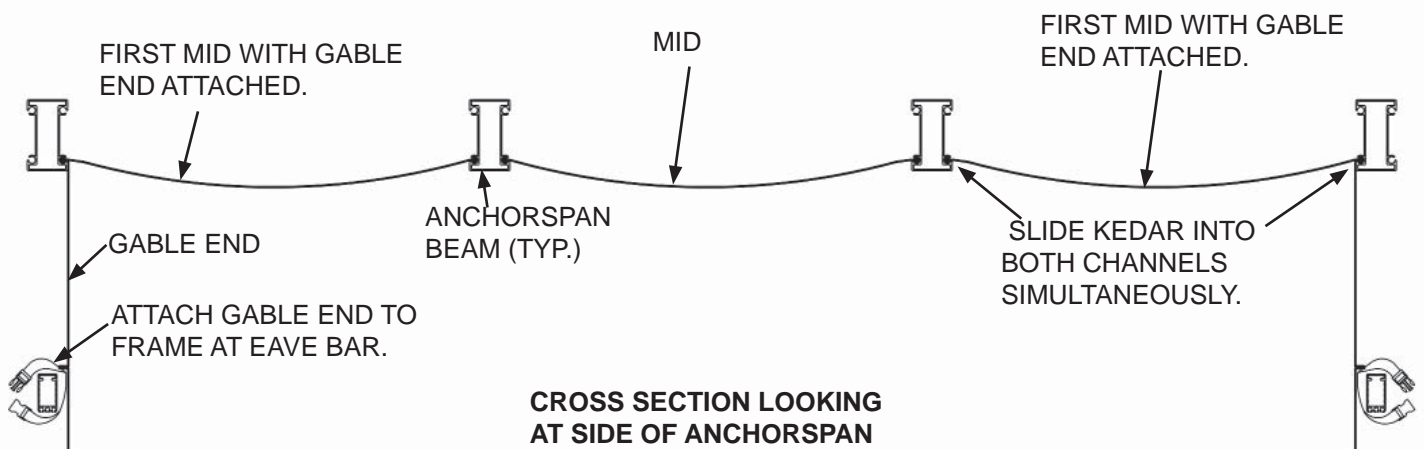

CROSS SECTION LOOKING AT SIDE OF ANCHORSPAN



STEP 2

PULL LINER MIDS IN EVENLY SO THAT THEY STOP AT THE SAME LEVEL ON EACH SIDE OF THE BUILDING. AT EACH CORNER OF LINER, HOOK SNAP ON STRAP INTO CHANNEL ON EAVE BAR AND THEN TIGHTEN STRAP.



7701 Highway 41 N
Evansville, IN 47725
Phone: 812-867-2421
Fax: 812-867-1429
1-800-544-4445
email: tents@anchorinc.com
www.anchorinc.com